



**Canada Popcorn Company**

**CENTERSTAGE PROFESSIONAL  
COTTON CANDY MACHINE  
USER MANUAL**

**HTD CANADA  
Item #V577**

[www.HTDCANADA.ca](http://www.HTDCANADA.ca)



# PROFESSIONAL COTTON CANDY MACHINE

## General Safety Precautions

1. This manual will outline safety warnings and precautions, operating, maintenance and cleaning. The warnings and instructions reviewed in this manual cannot cover all possible conditions and situations that may occur. Factors such as caution and common sense cannot be built into this product and it is trusted the operator will follow these measures.
2. This machine must never be modified and should only be used for its intended purpose.
3. Always check that the cotton candy machine is plugged into a grounded outlet with the appropriate electrical supply. Ensure that the wall outlet being used is properly grounded. If it is not, you must install a grounded outlet.
4. Before disconnecting from the power source, be sure that all switches have been turned OFF. To unplug the machine, firmly grasp the plug and remove from the outlet – never pull on the cord itself.
5. Ensure that the power outlet, plug and cord being used are in good, working condition. Even with a properly functioning power cord, keep water away from the cord and avoid letting your power cord run over carpets or heating devices.
6. If missing or broken components are found, leave the cotton candy machine TURNED OFF. Do not attempt to use it. Contact HTD Canada at info@htdcanada.ca.
7. No minor should operate this machine unsupervised. Keep hands, foreign objects, long hair and loose clothing away from the heating head while in use. Also avoid striking or hitting the heating head while in operation to avoid damage to the fins or the operator.
8. Always use the machine in a clean and dry area.


## Operating Instructions

1. Install the bowl on top of the base using the 4 clamps located on the sides of the base. Make sure the bowl is centered and not in contact with the heating head. Place floss bubble shield (optional) on top of the bowl and push the edges to snap on.
2. Connect the power cord to the base and plug it into a grounded outlet.
3. Switch both the “power” and “heat” switches to the ON position. Both switches will light up when turned on. Please check that the machine runs steady or if it shakes off balance, it may need to be adjusted or cleaned. If the machine shakes strongly, the operator must insure the machine is on a level stable surface, the feet are intact and level and the heating head is tight and runs true.
4. Allow the machine 2 – 3 minutes to heat prior to use.
5. Add floss sugar directly into the well in the heating head using the floss scoop provided. Do not overfill.
6. Cotton candy will begin to spin around the bowl as the heater head continues to operate. As the cotton candy accumulates, it will build up and come out from the spinner head. Using a paper cone collect the cotton candy from the edges of the bowl in a circular motion. Repeat steps 5 & 6 until the desired amount of cotton candy has been produced. \*\*Allow the machine to cool down for 10-15 minutes after an hour of continuous use.
7. When you are done using the machine please run for an additional 3 minutes with the heat turned on and continue to run another 3 minutes with the heat off to cool.

## Cotton Candy Machine Specs

Item#	V577
Base Dimensions	12.5" x 12.5" x 12.5"
Bowl Dimensions	20.5" Diameter
Voltage	110V
Wattage	1080W
Yield	2 Cones/Minute

## Wiring Diagram

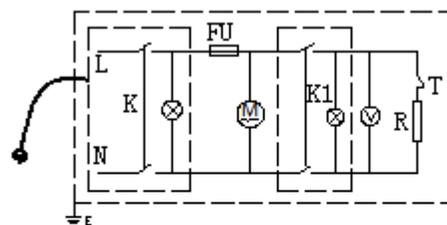


- L ----- COPPER SHEATHED CABLE
- M ----- 80W AC MOTOR
- Fu ---- TUBULAR FUSE
- K ----- MAIN SWITCH
- T----- TEMPERATURE LIMITER
- V----- 0~300V AC VOLTAGE METER
- R----- 1000W HEATING PLATE
- K1---- HEATING SWITCH

## Cleaning and Maintenance

1. Turn off all switches and unplug the unit. Keeping the heating head clean is important for food safety and the life of your machine.
2. Allow the heating head to cool before thoroughly cleaning with damp cloth.
3. The base and exterior of the bowl can be cleaned with a damp cloth, soap and water.
4. Do not immerse in or use excessive water when cleaning this unit.
5. If the heating head screws are difficult to remove you must heat up the heating head. To avoid getting burned please use an oven mitt or rag to hold the heating head.

## Parts and Accessories

Part Name	Replacement Part Item #
Floss Bowl Stabilizer Net and Clips	V534
Floss Bubble Shield	V549
Belt	V577BELT
Carbon Brush	V577BRSH
Motor	V577MTR
Copper Floss Band	V577RING
Hi-Limit Thermostat	V577HLT
Heating Head	V577CCHH
Fuse	V577FUSE

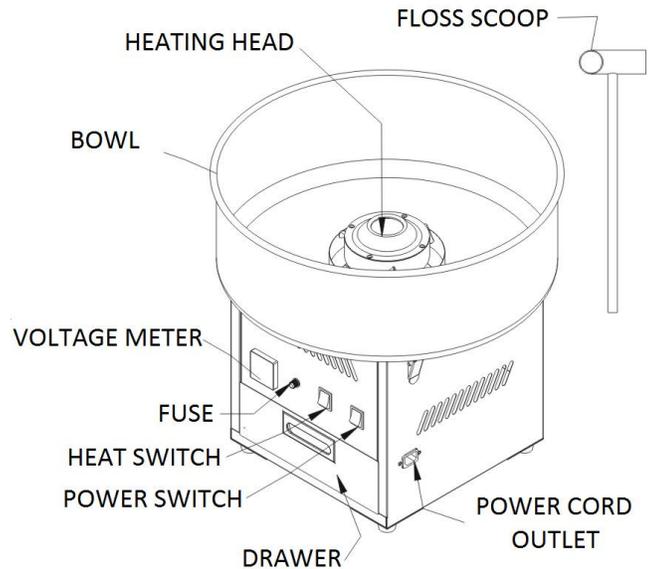

### Also available...

#### Floss Bubble Shield (sold separately)

#V549

Floss bubbles help protect against debris. Simply set on top of your Metal Cotton Candy Bowl and begin serving up delicious cones of cotton candy to your customers!



**If you have any damaged, missing parts or concerns Please do not return to or contact the retailer. Please contact us directly at**

**[info@htdcanada.ca](mailto:info@htdcanada.ca)**

**613-693-1806**

#### 1 Year Parts Warranty

This warranty is not effective if damage occurs because of accident, carelessness, improper installation, lack of proper set-up, supervision when required, or if the equipment is installed or operated in any manner contrary to the installation and operating instructions. Work performed by unauthorized personnel or unauthorized service agencies voids this warranty. This warranty does not apply to any warranty claims made on products sold or used outside of Canada