

THERMOSTAT ADJUSTMENT

1. Unplug the popcorn machine from the AC outlet.
2. Remove the kettle from the machine by:
 - a. Putting kettle in the "OPEN" position (hanging)
 - b. Unplug the kettle pigtail from the ceiling of the popper
 - c. Pull the clip from the hinge pin and remove the pin
 - d. The kettle will now be free
3. Place the kettle upside-down on a flat surface.
4. Remove the two acorn nuts and you will be able lift the outer jacket off the inner pot. (Figure 1)
5. Locate the thermostat (P/N 1039) in the center of the kettle and notice the adjustment screw. (Figure 2)
6. Notice the color of the rings and the stem to determine which direction you need to turn the screw to increase or decrease temperature. Refer to (Figure 3) to identify your thermostat and direction.



FIGURE 1



FIGURE 2

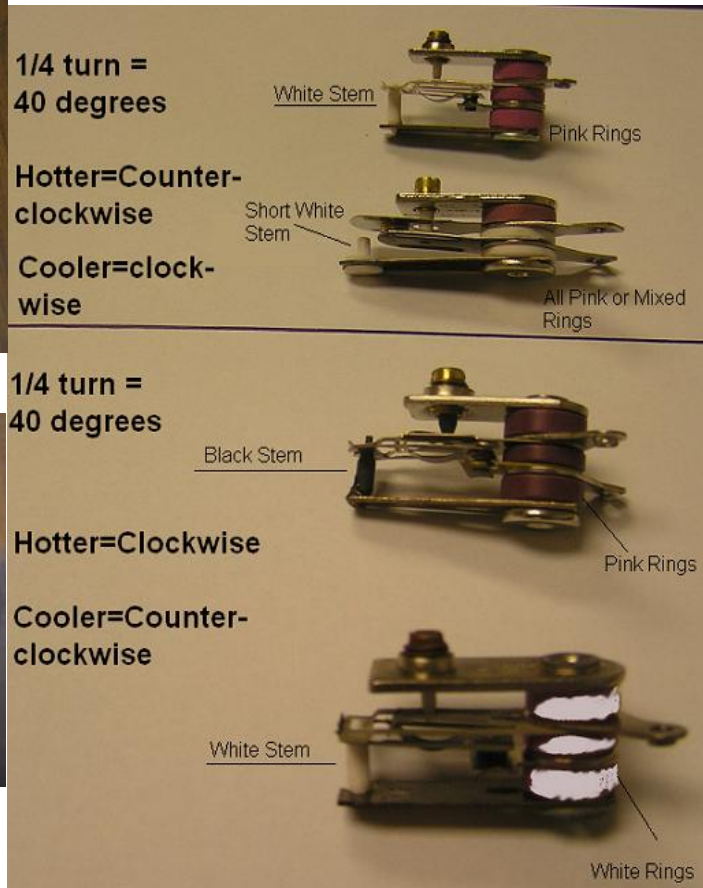


FIGURE 3

Assemble Kettle and attempt to pop a batch of popcorn. In extreme cases the thermostat may need another adjustment or replaced.